



MacBook Pro 13" Unibody Mid 2010 Trackpad Replacement

Replace a broken trackpad on your Mid 2010 MacBook Pro 13" Unibody.

Written By: Andrew Bookholt



INTRODUCTION

Use this guide to replace a broken trackpad.



TOOLS:

- [Phillips #00 Screwdriver](#) (1)
- [Spudger](#) (1)
- [Tri-point Y0 Screwdriver](#) (1)



PARTS:

- [MacBook Pro 13" Unibody \(Model A1278\) Trackpad](#) (1)
- [MacBook Pro Unibody \(Mid 2009 through Mid 2012\) Trackpad Mounting Screws](#) (1)

Step 1 — Lower Case



- Remove the following 10 screws securing the lower case to the MacBook Pro 13" Unibody:
 - Seven 3 mm Phillips screws.
 - Three 13.5 mm Phillips screws.

Step 2




- Slightly lift the lower case and push it toward the rear of the computer to free the mounting tabs.

Step 3 — Battery



- Remove the following tri-point screws securing the battery to the upper case:
 - One 5.5 mm tri-point screw.
 - One 13.5 mm tri-point screw.

Step 4

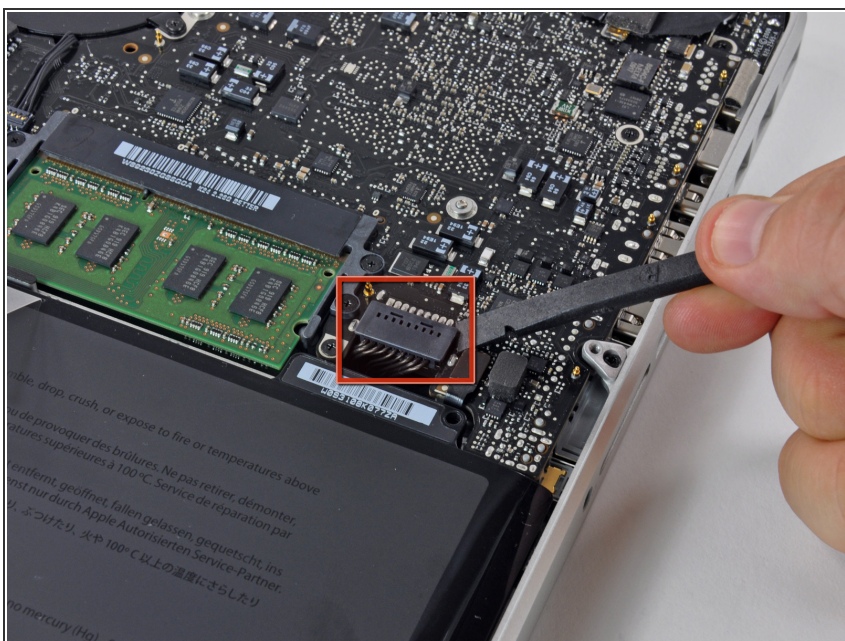

- Use the flat end of a spudger to lift the battery connector up out of its socket on the logic board.



- Lift the battery out of the upper case.

Step 6 — Trackpad




- Use the flat end of a spudger to carefully pry the trackpad connector up from its socket on the logic board.

Step 7




- Open your MacBook Pro and set it on a table as shown.

Step 8

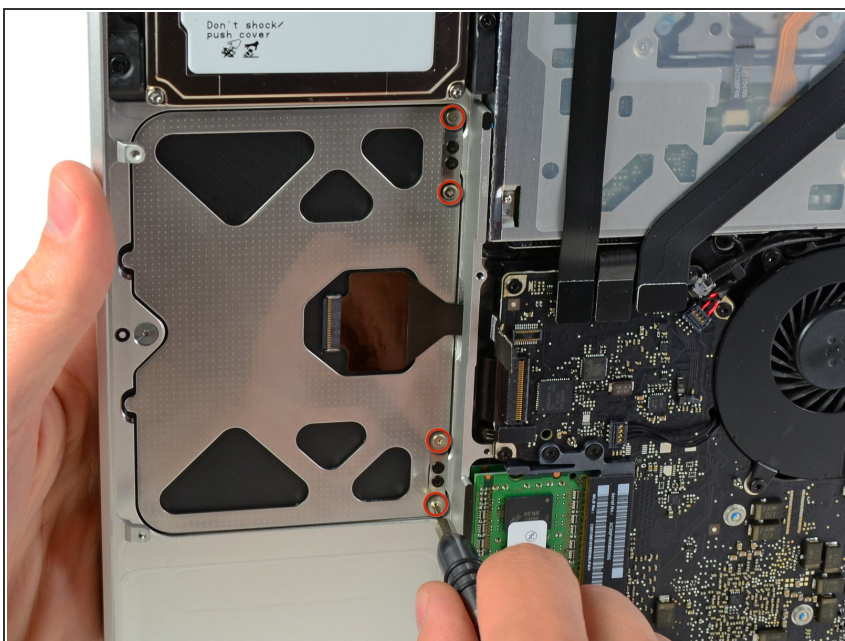


- While holding the edge of the trackpad closest to the logic board with one hand, remove the four 1.2 mm Phillips screws highlighted in red.

Step 9

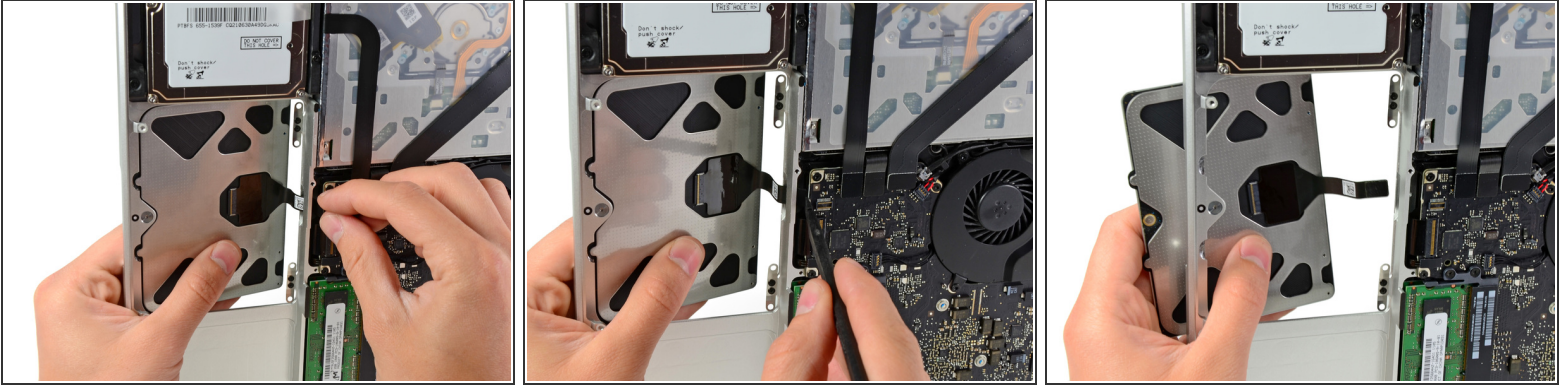


- If necessary, carefully dislodge the edge of the trackpad closest to the keyboard from its recess in the upper case by pushing it away from the brackets attached to the upper case.
- Carefully push the trackpad connector and cable down through the slot cut into the upper case.
- It may be necessary to use a spudger to help get the trackpad connector past the edge of the logic board.
- Once the cable has been completely pulled through its slot in the upper case, pull the trackpad away from the outer edge of the upper case and remove it from the machine.

Step 10

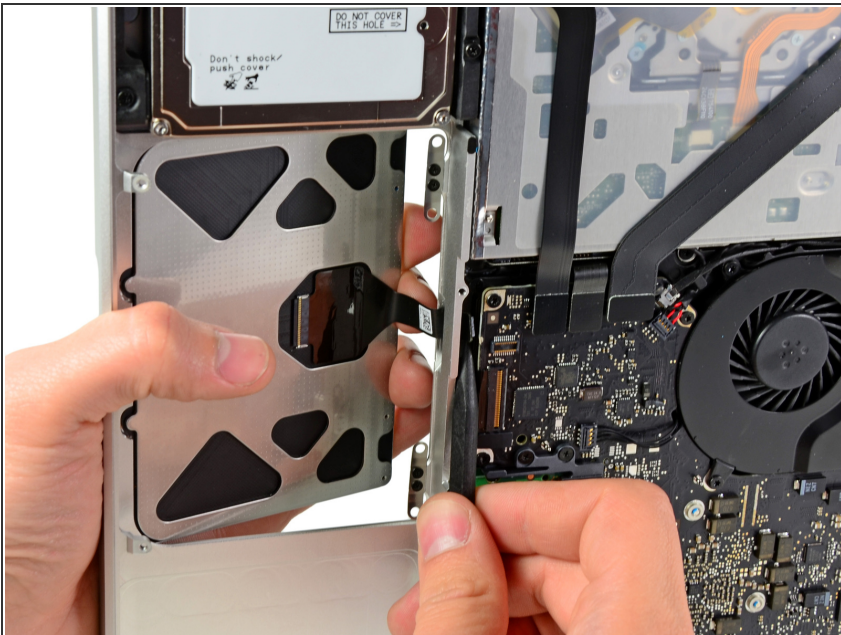

- ★ When installing your new trackpad, routing the cable through the upper case and past the logic board may be difficult. It is helpful to use the tip of a spudger to guide the connector past the logic board while pushing the cable through its slot in the upper case with your other hand.

Step 11

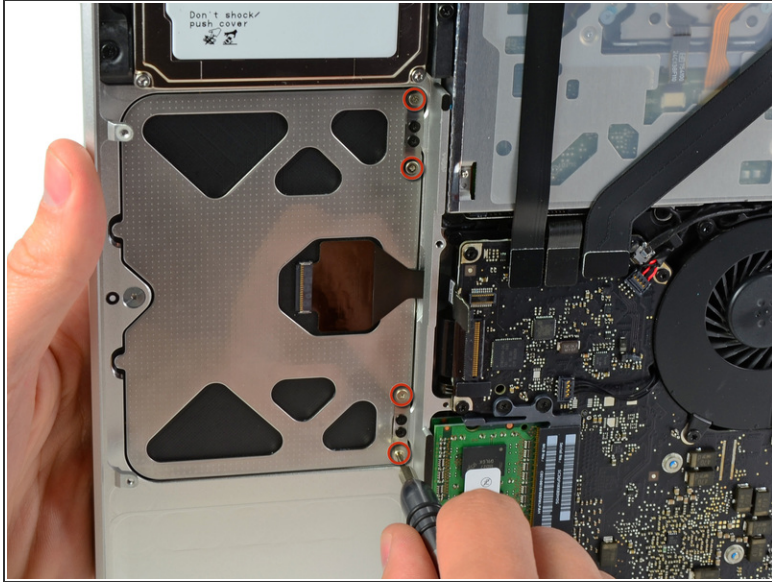

- Next, reinstall the four 1.2 mm Phillips screws along the inner edge of the trackpad.
- ⓘ Tighten the screws all the way, then back them out about 1/4 turn.
- Check the alignment of the trackpad on the keyboard side of the upper case. Once you have centered the trackpad in the upper case, tighten the four Phillips screws all the way.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-11-20 02:56:33 AM.